

PATIENT LIFT: FLYER PLUS with mechanical opening legs



MADE FROM STEEL
WEIGHT CAPACITY: 180 kg
CLASS 1 MEDICAL DEVICE

CONFORM TO STANDARD NF EN ISO 10535: 2007

Contents

User Manual / Patient Lift: FLYER PLUS with mechanical opening legs

Intended Purpose Scope of Delivery	1
Assembling Instructions	2-3
Patient Lifts Use	4-7
Motorisation Informations	8-9
Slings Use	10-13
Reuse Labelling	13-15
Preventive Maintenance & Security Controls	16-17
General Safety Guidelines	18
Technicals & Dimensionals Characteristics	19
Spare Parts	20
Cleaning & Maintenance	21
Motorisation Technicals Characteristics	22-24
Troubleshooting Guide	25
• Warranty	25



Intended Purpose

The patient lift (Flyer plus with mechanical opening legs) is an active Class I medical product according to EU Council Directive 93/42/EC, Appendix IX. It can be universally used in the entire care sector (except potentially explosive areas).

Its use compensates for the disability or incapacity of the patient and makes the working conditions easier for the care personnel.

It is provided exclusively for transfer and transport of a patient with restricted mobility caused by illness or disability.

Moving the patient lift (Flyer plus with mechanical opening legs) is only suitable for short distances inside the residence / sphere of activity of the patient and on one building level. It is only permitted to be used on a flat and level surface.

It is intended for short-time use without contact with injured skin and needs a suitable hoist slina for use.

The patient is picked up in sitting position as standard; however a lying position is also possible when an Nausicaa lying transport clamp and lying transport sling are used. Even picking up a patient from the floor is possible.

The Flyer plus with mechanical opening legs is suitable for a patient weight up to maximum 180 kg. The operation is performed by an instructed carer.

The Flyer plus with mechanical opening legs is suitable for use at an ambient temperature from 0 °C to 40 °C, humidity of 20% to 80% and air pressure of 700 hPa to 1060 hPa in normally composed atmospheric air. It may be used in humid rooms such as bathrooms and toilets. Do not use this hoist under a running shower.

Syndromes such as osteogenesis imperfecta, osteoporosis or spinal column damage and mental aberration or epileptic attacks can be contraindications. The Flyer plus with mechanical opening legs is only permitted to be used after careful consideration of the individual patient by the doctor and the care personnel.

Scope of Delivery

The Patient lift has already been inspected at the factory to ensure that it is free from defects and that nothing is missing. Nevertheless, please check the product immediately after receipt for any damage which may have occurred during transport.

Use the delivery note to check that all items are present and that the delivery is thus complete.

Вох	Contents	Units
	FLYER PLUS with mechanical opening legs	1
FLYER PLUS with	Battery pack (removable)	1
mechanical opening legs	Handcontrol	1
	User Manual	1

Assembling Instructions

BEFORE USING YOUR PATIENT LIFT, IT IS NECESSARY TO CHECK:

- The wheels turn and roll normally.
- The rear wheels function correctly.
- There is no wear or deformation on the hooks.

WARNING:

- To preserve the inserts, do not overtighten.
- Assembly is done with the brakes locked.



Step 1:

- Unscrew the handset located on the base.



- Raise the apparel mast.



Step 3:

- Insert the handset into the corresponding hole and screw it until it blocks.





Assembling Instructions

Step 4:

- Put out the spreader bar axis from its stocking position by rising it.



Step 5:

- Mounting the actuator on the lifting arm:
- insert the axis on the fixation part.
- insert the washer (4 mm thickness) between

the fixation part and the actuator.

- insert the actuator into the axis.
- insert the washer (4 mm thickness) between

the actuator and the fixation part.

- screw the two handsets.

WARNING:

• The red plastic part must be toward the patient.



DIRECTIONS FOR USE:

- Your patient lift is designed to lift people, do not use it for other purposes.
- Check that the patient's weight does not exceed the maximum weight that can be raised by the patient lift.
- Do not force the controls and features of the patient lift, they are all easy to use and do not require strength.
- Operate the patient lift by pushing the handles, never by pushing the patient.
- The patient lift must be handled with care when a patient is transferred and at a speed appropriate to the situation.
- \bullet Operate the patient lift on flat and smooth surfaces. It is not recommended to be used on a slope of more than 5 °. If you are forced to move on a ramp, it is recommended that a second person helps you. Do not use an electric patient lift in a shower.
- Do not recharge the batteries near a bath or shower.

Patient lifts allow patients to be transferred from a bed, chair, toilet, wheelchair or from the floor in an easy and efficient way.

In care environments, they offer to the caregiver the most appropriate solution for the basic tasks of patient handling: lifting and repositioning.





TRANSFERT FROM A BFD



The mobile lifts are useful and efficient when a patient is dependent and therefore needs a caregiver to perform basic care.

Choosing the right device is essential as it has been demonstrated that the use of adapted equipment reduces the risk of injury, both for the patient and for the caregiver.

Using a patient lift requires a physical capacity assessment of the patient.

With our devices, caregivers can perform the following transfers:

- Patient transfer from a chair to a bed.
- Patient transfer from a bed to a chair.
- Patient transfer from the floor.



Parking brake

The parking brakes are one of the important safety elements of an stand-up lift. The rear castors are fitted with parking brakes which act directly on the wheels. To lock the castors, press the parking lever to the stop using your foot (Castor Locked). The stand-up lift can no longer be pushed in this setting. To release the castors, press the parking lever pointing upwards (Castor Released).

When locking the castors always insure that both castors are locked. If only one castor is locked on a sloping floor, the unlocked wheel will roll downhill around the locked wheel.

Depending on the slope of the surface, there is the danger that the stand-up lift will tip over sideways.

Castor Released



Castor Locked



User Manual - Patient Lift: FLYER PLUS with mechanical opening legs Manufactured by NAUSICAA Médical S.A.S. / Approved by Ghizlane Labrosse (Biomedical Engineer)

- 1. If the patient is lying on his back, turn him so that he is facing away from you.
- 2. Fold the Nausicaa standard sling in half in the longitudinal direction.
- 3. Place the Nausicaa standard sling with the folded side on the back of the patient. In doing so, the Nausicaa logo and the labels must face downwards. Ensure that the bottom edge of the sling back part is on the coccyx and the top edge is on the shoulders of the patient.
- 4. Now roll the patient over the Nausicaa standard sling to the other side.
- 5. Now pull the folded half of the Nausicaa standard sling under the patient and place it properly.
- 6. Now turn the patient back onto his back.
- 7. The patient is lying correctly on the Nausicaa standard sling if his back is completely on the sling back part and the leg supports are next to the thighs.
- 8. Now raise the back part of the homecare bed until the patient is almost sitting upright.
- 9. Fold both the leg supports from the outside to the inside around the respective thighs of the patient.
- 10. Position your Nausicaa patient hoist with the Nausicaa standard transport clamp so that the Nausicaa standard transport clamp is at eye height in front of the patient. Ensure there is sufficient clearance between the face of the patient and the Nausicaa standard transport clamp.
- 11. Ensure before attaching to the clamp that both the shoulder loops as well as both the leg loops are at the same height.
- 12. Now hang both the shoulder loops in the outer hooks of the Nausicaa standard transport clamp.
- 13. Afterwards, hang both the leg loops crosswise on the inner hooks.
- 14. Raise the lifting arm of the Nausicaa patient hoist slightly until the leg and shoulder loops are tensioned. Now check whether the Nausicaa standard sling is attached correctly and comfortably.
- 15. You can now lift the patient. Use the manoeuvring handle located on the top edge of the sling back part for easier manoeuvring.





Observe the following safety instructions before every lifting / uprighting and conveying of the patient:

- The care personnel (user) must have the corresponding expert knowledge to select and use a suitable hoist sling.
- Check the permissibility of the combination of transport clamp and hoist sling based on Chapter 10 Accessories / Combinations before using the patient hoist.
- Verify the actual maximum load of the combination. In the case of differences between the maximum loads of patient hoist, transport clamp and sling, the lowest maximum load is always mandatory for you.
- Check the correct sling size and sling form in relation to the patient.
- Check the safe condition of the sling before every use. The sling must have neither tears in the material nor damaged seams.
- Check whether the correct loop combination has been attached. All loops have 3 different mounting levels: long medium short. Each loop pair (e.g. leg loops, shoulder loops) must only show the following mounting combination: long long, medium medium or short short.
- Check whether all loops are attached in the mounting hook.
- Lock the rollers/castors/wheels of the wheelchair, the homecare bed, the stretcher etc. in order to be able to raise and lower the patient safely. In doing so, leave the castors of the patient hoist unbraked.
- Arrange the patient transport to be as short as possible and never leave the patient hanging unsupervised in the hoist sling.
- Observe the patient during the transfer. Violent movements of the patient or holding on to objects during the transfer can result in hazards.
- Only lift the patient as high as is necessary.
- Keep the hoist slings away from intense heat or open flame; they are not flame retardant.



Prior to each use, it is important to check the status of the device: seams, state of the straps and of the fabric.

Any damage will either be repaired by NAUSICAA Medical, or will result in a disposal.

Motorisation Informations



Before use, check that the actuator and the handcontrol are correctly connected to the control unit (page 22)

Check the status of the control box and the battery





Check that the actuator is properly secured




2

Check that the battery is charged



Motorisation Informations

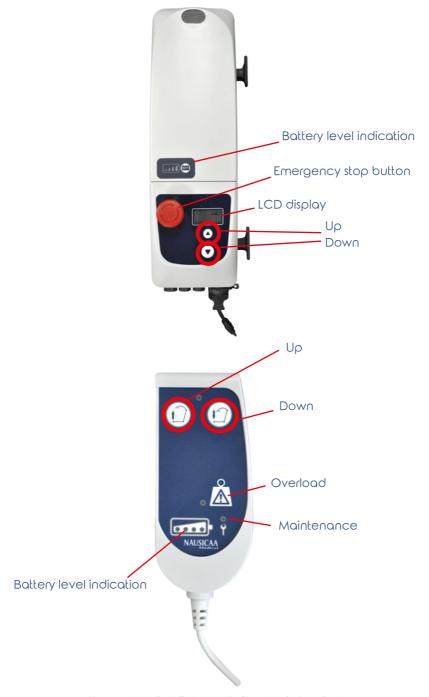

An assessment of the patient capacity is required before using a patient lift and more precisely the following parameters should be taken into account depending on the situation, such as the patient's physical handicap, pathology and morphology.

In order to choose the right sling, the caregiver shall take into account into account the three following factors:

- Patient height
- Patient waist size
- Patient thighs size

 
All our slings are Class 1 Medical Devices, provide sustainable solutions for reassuring transfers and are compatible with all patient lifts with a 2-point or 4-point spreader bar.

FABRICS

Depending on the slings model, we propose two types of fabric in polyester:

- Jersey: very easy to handle, provides an optimized and comfortable positioning.
- Net: ideal for bath and toilet, avoids maceration and easy to dry.

JERSEY



NET



IMPORTANT RECOMMANDATIONS

In order to get a maximum efficiency of these sort of product, it is necessary:

- to choose the appropriate size for the patient
- to get the best possible adjustment to the patient

These products must not be in direct contact with a wounded skin.

Read the instructions for use before using the sling.

Hang to the spreader bar the loop which are at the same level.

Do not change any adjustment while the patient is hanging in the sling.

Before lifting a patient, ensure that the sling is correctly hooked on the spreader bar.

Sling positionning

Check that loops are symmetrically attached to the shoulders and the legs





- Short ties at the shoulders level
- Long ties, crossed between the legs





Seated position:

- Medium ties at the shoulders level
- Long ties at the shoulders level



Half-seated position:

- Medium ties at the shoulders level
- Long ties, uncrossed between the legs

For lying down transfers or lifting from the floor transfers, it is necessary to always use a sling with a headrest or to add a removable headrest to the sling.

For patients without head support, it is necessary to always use a sling with a headrest or to add a removable headrest to the sling.

CAUTION

Check that loops never slide off the hooks and check the make sure that the device (seams, state of the straps and of the fabric) is not damaged.

Check that the patient can not bump into something

Check that the combination sling / patient lifter maintains a good stability during the transfer



THIS MEDICAL DEVICE MUST BE SET UP BY A PROFESSIONAL OR THE USER MUST BE EDUCATED TO SET IT UP.

The type and size of the belt always depends on the patient's stature and the type of application. NAUSICAA Médical offers you a wide assortment of lifting straps adapted to your requirements.

Types of	Bed/chair transfer in a	Transfer with the sling		Bath, shower	Toilet and daily
Patient's transfers physical conditions	seated position	placed on the chair	Lifting from floor transfer	and pool transfer	change transfer
Simple amputee (short/long)	Comfort sling Fast adjustable comfort sling (without headrest) for 2-point spreader bar Universal eco sling (comfort)	Standard comfort hammock Universal eco hammock	Comfort sling (+ headrest) Comfort hammock without crossing (+ headrest) Universal eco hammock	Bath sling Fast adjustable bath sling (without headrest) - for 2-point spreader bar Fast adjustable eco sling (without headrest) - for 2-point spreader bar Universal eco sling (bath)	Quick toilet sling Backrest toilet sling Universal eco toilet sling
Double amputee (short/long)	Comfort hammock without crossing Standard comfort hammock Universal eco hammock	Standard comfort hammock Universal eco hammock	Comfort hammock without crossing (+ headrest) Standard comfort hammock Universal eco hammock	Bath hammock without crossing (+ headrest) Standard bath hammock Universal eco hammock	I
Convulsive hypertonic	Comfort hammock without crossing	I	Comfort hammock without crossing (+ headrest)	Bath hammock without crossing (+ headrest)	I
Person in a shell wheelchair	Backrest sling Quick toilet sling Backrest toilet sling	ı	Backrest sling	Backrest sling	Backrest sling
Bariatric patient	Bariatric sling	I	Bariatric sling	Bariatric sling	Bariatric sling
Agitated patient	Enveloping sling Ergonomic sling Universal eco hammock	Universal eco hammock	Enveloping sling Ergonomic sling Universal eco hammock	Fast adjustable bath sling for 2-point spreader bar Universal eco hammock	I
Postoperative phase of hip prosthesis replacement	Backrest toilet sling Quick toilet sling Comfort hammock without crossing	I	Comfort hammock without crossing	Quick toilet sling Bath hammock without crossing	Quick toilet sling
Patient with no head support	Comfort sling (+ headrest) Fast adjustable comfort sling Backrest sling	Standard comfort hammock Universal eco hammock	Comfort sling (+ headrest) Comfort hammock without crossing (+ headrest) Universal eco hammock	Bath sling (+ headrest) Fast adjustable bath sling - for 2-point spreader bar Universal eco hammock	I
Lack of muscle tone in the lower limbs	Comfort sling Fast adjustable comfort sling (without headrest) - for 2-point spreader bar Universal eco sling (comfort)	Standard comfort hammock Universal eco hammock	Comfort sling (+ head-rest) Comfort hammock without crossing (+ headrest) Universal eco hammock	Bath sling Fast adjustable bath sling (without headrest) - for 2-point spreader bar Fast adjustable eco sling (without headrest) - for 2-point spreader bar Universal eco sling (bath)	Quick toilet sling Backrest toilet sling Universal eco toilet sling
Lack of muscle tone at the bust and head level	Comfort sling Fast adjustable comfort sling (without headrest) - for 2-point spreader bar Universal eco sling (comfort)	Standard comfort hammock Universal eco hammock	Comfort sling (+ head- rest) Comfort hammock wit- hout crossing (+ headrest) Universal eco hammock	Bath sling Fast adjustable bath sling (without headrest) - for 2-point spreader bar Fast adjustable eco sling (without headrest) - for 2-point spreader bar Universal eco sling(bath)	Quick toilet sling Backrest toilet sling Universal eco toilet sling
Hemiplegia	Comfort sling Fast adjustable comfort sling (without headrest) - for 2-point spreader bar Universal eco sling (comfort)	Standard comfort hammock Universal eco hammock	Comfort sling (+ head-rest) Comfort hammock without crossing (+ headrest) Universal eco hammock	Bath sling Fast adjustable bath sling (without headrest) - for 2-point spreader bar Fast adjustable eco sling (without headrest) - for 2-point spreader bar Universal eco sling(bath)	Quick toilet sling Backrest toilet sling Universal eco toilet sling
Active paraplegia with muscle tone at the bust level	Backrest sling Universal eco sling (comfort)	1	Comfort sling (+ head- rest) Comfort hammock wit- hout crossing (+ headrest) Universal eco hammock	Bath sling Universal eco sling(bath)	Quick toilet sling Backrest toilet sling Universal eco toilet sling
Active paraplegia without muscle tone at the bust level	Comfort sling Fast adjustable comfort sling (without headrest) - for 2-point spreader bar Universal eco sling (comfort)	ı	Comfort sling (+ head- rest) Comfort hammock wit- hout crossing (+ headrest) Universal eco hammock	Bath sling Fast adjustable bath sling (without headrest) - for 2-point spreader bar Fast adjustable eco sling (without headrest) - for 2-point spreader bar Universal eco sling(bath)	Quick toilet sling Backrest toilet sling Universal eco toilet sling
Tetraplegia	Comfort sling (+ head- rest) Fast adjustable comfort sling Backrest sling	Standard comfort hammock Universal eco hammock	Comfort sling (+ head- rest) Comfort hammock wit- hout crossing (+ headrest) Universal eco hammock	Bath sling (+ headrest) Fast adjustable bath sling for 2-point spreader bar Universal eco sling(bath)	I
Physical and psychical dependency	Enveloping sling Ergonomic sling Universal eco hammock	Universal eco hammock	Enveloping sling Ergonomic sling Universal eco hammock	Fast adjustable bath sling for 2-point spreader bar Universal eco sling(bath)	I

Weight / Size	1m50	1m55	1m60	1m65	1m70	1m75	1m80	1m85	1m90	+ 1m90
40 kg	S	S	S	S	S	S	М	М	М	М
45 kg	S	S	S	S	S	S	М	М	М	М
50 kg	S	S	S	S	S	S	М	М	М	М
55 kg	S	S	S	S	S	S	М	М	М	M
60 kg	М	М	М	S	S	S	М	М	М	М
65 kg	М	М	М	S	S	S	М	М	М	М
70 kg	М	М	М	М	М	М	М	М	М	M
75 kg	L	L	М	М	М	М	М	М	М	М
80 kg	L	L	L	L	М	М	М	М	М	M
85 kg	L	L	L	L	М	М	М	М	М	М
90 kg	L	L	L	L	L	L	М	М	М	M
95 kg	XL	XL	XL	XL	L	L	М	М	М	М
100 kg	XL	XL	XL	XL	L	L	L	L	L	L
110 kg	XL	XL	XL	XL	L	L	L	L	L	L
120 kg	XL	XL	XL	XL	XL	XL	L	L	L	L
130 kg	XL									
more then 130 kg	XL+									



Reuse

The patient hoist is suitable for reuse. Ensure that the patient hoist has been cleaned according to Chapter Care / Cleaning and serviced according to Chapter Maintenance before the reuse.

Labelling

Labelling on the box



Labelling



SAFETY INSTRUCTIONS **BEFORE EACH USE**



- · Check the perfect condition of the hoist sling.
- Check the perfect condition of the traction sling (EASYLEV, NAUSILEV).
- Verify the presence and conditions of safety devices: all axis and their constrained fixations (pins, clips and bolts) and the tightness of the screws (see

DO NOT USE THE DEVICE IN CASE OF ANY LACK OR BAD OVERALL STATE

flyer plus NAUSICAA

POIDS MAXIMUM MAXIMUM WEIGHT MAXIMALE TRAGFÄHIGKEIT PESO MAXIMO PESO MASSIMO



180 kg **NAUSICAA** FRANCE Médical





- A POORLY MAINTAINED BATTERY DETERIORATES
- · Regularly recharge the battery at the maximum.
- · Making small incomplete charges shortens the battery life.
- The battery should not be exposed to temperatures neither too low nor too high.
- The batteries status depends on the maintenance and therefore can not be under warranty.
- It is important to check the charger if the battery no longer works.





Labelling



Preventive Maintenance & Security Controls

Patient Lift: FLYER PLUS with mechanical opening legs

Serial Number:

Control of security points (Frequency: depending on use, recommended every three months)

This is a sight control: any wear trace must lead to a replacement.

	GOOD	WRONG	DATE OF CHANGE
Spreader bar fixation			
Actuator top fixation			
Mast top fixation			
Actuator bottom fixation			
Mast/Base assembly			
Mast/Base assembly 2			
Handle bar fixation			
Foot pedal fixation			
Wheels fixation			
Foot/base assembly			
Structure state			
ntrol of electrical functions (Frequency: de this control must be carried out			
	when the	hoist is loc	aded.
this control must be carried out	when the	hoist is loc	nded.
this control must be carried out Operation of the actuator	when the	hoist is loc	nded.
Operation of the actuator Operation of the emergency system	when the	hoist is loc	nded.
Operation of the actuator Operation of the emergency system Batteries status (charge holding)	when the	hoist is loc	aded.
Operation of the actuator Operation of the emergency system Batteries status (charge holding) Handcontrol status	when the	hoist is loc	nded.
	Actuator top fixation Mast top fixation Actuator bottom fixation Mast/Base assembly Mast/Base assembly 2 Handle bar fixation Foot pedal fixation Wheels fixation Foot/base assembly Structure state	Spreader bar fixation Actuator top fixation Mast top fixation Actuator bottom fixation Mast/Base assembly Mast/Base assembly 2 Handle bar fixation Foot pedal fixation Wheels fixation Foot/base assembly Structure state	Spreader bar fixation Actuator top fixation Mast top fixation Actuator bottom fixation Mast/Base assembly Mast/Base assembly 2 Handle bar fixation Foot pedal fixation Wheels fixation Foot/base assembly Structure state

Preventive Maintenance & Security Controls

Control of security points (Frequency: depending on use, recommended every three months)

This is a sight control: any wear trace must lead to a replacement.

Spreader bar fixation

2 — Actuator top fixation

3 — Mast top fixation

Actuator bottom fixation

Mast/Base assembly

Mast/Base assembly 2

The Handle bar fixation

Foot pedal fixation

9 — Wheels fixation

10 — Foot/base assembly

STRUCTURE STATE

THESE CONTROLS CAN BE CARRIED OUT WITHOUT LOAD

Periodical Greasing



General Safety Guidelines


- 1. Use the Patient Lift only for its intended purpose, in accordance with the legislation for medical devices, the regulations for labor protection and accident prevention, as well as the generally recognized rules of technology.
- 2. Note that the Patient Lift is a medical device, therefore the user is required to comply with the directive on the use of medical devices.
- 3. The requirements for the electrical installation of the room or area where the Patient Lift is used must meet the current state of the technology.
- 4. Using the Patient Lift only after being trained for its handling.
- 5. Before using the device, please read the complete User Manual in order to avoid damage due to improper handling or exposure to risks. The User Manual contains important information and notes required for the Patient Lift use.
- 6. Use the Patient Lift in accordance with this User Manual only. Keep the User Manual for future reference in case of questions. Join this User Manual to the Patient Lift in case of change of ownership.
- 7. Before any use, it must be ascertained whether the Patient Lift and its accessories are in working order and in impeccable conditions.
- 8. Before using the Patient Lift with other medical and non-medical devices, check that the combination of these products is allowed and can be used together safely.
- 9. Assembly, commissioning, maintenance and repair of the Patient Lift should be entrusted only to specialists.
- 10. It is up to the user or operator to ensure (through adequate measures and instructions) that mechanical stress of the charging cord (through bending, tension, shear, crushing) is excluded during loading or cleaning of the part. This also applies to the electrical cables of other devices used with the Patient Lift.
- 11. Respect the activation duration and the maximum weight capacity. These values must not be exceeded, otherwise the Patient Lift safe operation is no longer guaranteed.
- 12. Do not expose the Patient Lift to direct sunlight or heat.
- 13. Ensure that no moisture enters the electrical system.
- 14. Avoid mechanical stress on electrical cords, Pull, bend or crush the cords may damage them.
- 15. Charge batteries in a well ventilated area.
- 16. Electromagnetic interferences can not be excluded from the Patient Lift and other devices. If there is a risk of such interference, the source of interference must be removed or the Patient Lift should not be used.
- 17. Disruptions caused by the use of portable communication devices can not be completely excluded. This is why a safe distance of at least 3 meters must be kept in order to ensure the functioning of the Patient Lift safely.
- 18. Do not leave unattended children stand near the Patient Lift.
- 19. The Patient Lift should not be used as soon as abnormal noises, damages or any other malfunctions occur. In this case, do not connect the wall charger to the Patient Lift and inform us.
- 20. If damaged or defective, the Patient Lift should not be used and should not be connected to the direct current. Inform the dealer to remedy the default or failure.


Technicals & Dimensionals Characteristics

- Frame made in steel
- Laser cutting and bending sheet metal, tubes and profiles
- Epoxy baked painting
- Ball bearing castors
- Total weight: 40 kg
- Weight of the heaviest part: 5,9 kg
- Weight capacity: 180 kg
- Lifespan: 8 years (except electrical parts)
- * SCP: Suspention central point

	Dimensions (in cm)
Α	63
В	54
С	62
K	199
L	78
M	121
Р	100
Q	60
R	63
S	3
Т	8
U	59
V	27
W	44
X	130

** SCP: Suspension central point

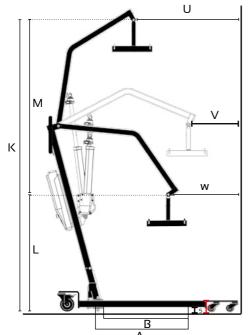

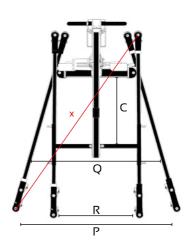

Spare Parts

FLYER PLUS FRAME	
FLEV-FS4P	4 POINTS SPREADER BAR
F3-AXVF	SPREADER BAR VERTICAL AXIS
FUS-PRFL	SPREADER BAR THERMOCOMPRESSED FOAM PROTECTION
WP-GM	SPREADER BRY THE MODE OWN PROTECTION HANDLEBAR
FLEV-EMC	COMPLETE BASE FOR FLY'EVER, FLY'EVER PLUS (base + 2 feet + pedal + spreading system set, without castors)
FLEV-PG	LEFT FOOT FOR FLY'EVER, FLY'EVER PLUS
FLEV-PD	RIGHT FOOT FOR FLY'EVER, FLY'EVER PLUS
FLEV-EP	SPREADING SYSTEM SET FOR FLY'EVER AND FLY'EVER PLUS (without pedal)
FLEV-EP-PD	SYREXULING STSTERM SET FOR FLIT EVER AND FLIT EVER EVER AND FLIT EVER AN
FLEV-EP-PD FLEV-KIT-EPE	ELECTRICAL OPENING BASE LEGS COMPLETE SET (3 metallic pieces, without rod, without actuator)
FLEV-BRL	LIFTING ARM FOR FLY'EVER AND FLY'EVER PLUS
WP-RNFRD100	BLACK SIMPLE CASTOR WITH RED BRAKE DIAMETER 100mm (ball bearing)
WP-RND50	BLACK TWIN CASTORS DIAMETER 50mm (ball bearing)
WP-BPGA9006	GREY SPRAY PAINT "ALUMINIUM 9006"
WP-BPBA	BLUE ATLANTE SPRAY PAINT
WP-VGA9006	ALUMINIUM GREY 9006 STICKER PAINT
WP-VBA	BLUE ATLANTE STICKER PAINT
VSTLCM	1 ACTUATOR (mechanical opening legs) BEFORE SERIAL NUMBER FLP-373
	2 FUNCTIONS REMOTE CONTROL REMOTE CONTROL HOOK
VS-CRTL	
VS-AMTL	MAGNET FOR REMOTE CONTROL
VSTLCM-FA	2 FUNCTIONS REMOTE CONTROL ADHESIVE FRONTAGE
VS-BCAM	REMOVABLE BATTERY PACK (with 2 internal batteries 5A/12V) WITH LOAD DISPLAY AND BALANCING
F3-BT2IN	SET OF 2 INTERNAL BATTERIES SA/12V
BAT-LI	INTERNAL LITHIUM BATTERY 5A / 24V
VS-BCAM-LI	LITHIUM BATTERY PACK WITH DISPLAY
VS-BCAM-CAR	BATTERY PACK COMPLETE CASING
VS-BCAM-KCRT	2 ELECTRONIC BOARDS SET (display and balancing) FOR BATTERY PACK VS-BCAM
VS-BCAM-KCFC	CONNECTION KIT WITH FUSES FOR BATTERY PACK VS-BCAM OU VS-BCAM-SMP
FUS-5-20-200MA	INTERNAL DELAY FUSE 5X20-200MA (set of 5)
FUS-5-20-1A	INTERNAL DELAY FUSE 5 x 20-1A 250 v (set of 5)
VS-BCAM-FAE	BATTERY PACK ADHESIVE FRONTAGE DISPLAY FOR VS-BCAM
VS-BCAM-CR	BATTERY PACK HOOK FASTENING
VSBCC	2 FUNCTIONS CONTROL BOX (without battery pack)
VS-BCC-CCC	CONTROL BOARD WITH LOADING SYSTEM FOR 2 FUNCTIONS CONTROL BOX
VS-BCC-BA	CONTROL BOARD WITH DISPLAY FOR 2 FUNCTIONS CONTROL BOX
VS-KCNF	CONNECTION KIT WITH FUSES FOR CONTROL BOARD VS-BCC-CCC AND VS-BCC-CCC-ECP
VS-BAUR	COMPLETE EMERGENCY STOP BUTTON
VS-BCH	CONTROL BOX POWER CORD INPUT PLUG
VS-CRD	POWER CORD
VS-ERL	POWER CORD REWINDER HOOK (set of 2)
VSVRN-FS8	8000N LIFTING ACTUATOR LIFTING STROKE 290mm
VS-VRN-CHT	HEAD SCREED FOR ACTUATOR WITH EMERGENCY LOWERING SYSTEM (all models)
VS-VRN-8-CEMB	8000N LIFTING ACTUATOR BASE SCREED (all models)
VS-VRN-8-CAR	8000N (all models) AND 3000N (VSNLV-VRN) LIFTING ACTUATORS COMPLETE CASING
VS-VRN-KBPR	
	EMERGENCY LOWERING SYSTEM 2 RED BUTTONS SET (all models)
VS-VRN-DM-CAR	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models)
VS-VRN-DM-CAR VS-VRN-DMC	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed)
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 5000N AND 8000N LIFTING ACTUATORS CORD (all models)
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CMB	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) SOON AND SOON LISTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CMB MOTORIZATION VEOR	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK 0X 3 F0R 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CMB MOTORIZATION VEOE VS-TLCM3	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 20 37 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3
VS-VRN-DM-CAR VS-VRN-G-8-CRD VS-CMB MOTORIZATION VEOE VS-TLCM3 VS-TLCM3-CCC	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMMETE CONTINUED EMERGENCY (OWERING SYSTEM FOR ACTUATOR (without the screed) SOON AND 8000 IN 18THOS ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 90X 3 FOR INACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS ACTUATOR CONTING LOR VEOROX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3
VS-VRN-DM-CAR VS-VRN-6-8-CRD VS-CMB MOTORIZATION VEOE VS-TLCM3 VS-TLCM3-CCC VS-TLCM3-CRD	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 5000M AND 8000M LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTEMY PACK 00X3 FOR 1A CTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CMB MOTORIZATION VEOE VS-TLCM3 VS-TLCM3-CRD VS-AMTL	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) SOON AND BOOKON LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK SOX 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL FOR VEOROX 3
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CRD MOTORIZATION VEOR VS-TLCM3 VS-TLCM3-CCC VS-TLCM3-CRD VS-TLCM3-CRD VS-AMTL VS-CRTL	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 00X3 760N 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CONTROL BOADS FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL RAMGENET FOR REMOTE CONTROL RAMGENET FOR REMOTE CONTROL
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CMB MOTORIZATION VEOE VS-TLCM3 VS-TLCM3-CCC VS-TLCM3-CRD VS-AMTL VS-GRTL VS-GRTL VS-TLCM3-FA	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 00 X3 FØR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL ACTUATOR FOR VEOROX 3 REMOTE CONTROL HOOK REMOTE CONTROL HOOK REMOTE CONTROL HOOK REMOTE CONTROL OF REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CMB MOTORIZATION VEOE VS-TLCM3-CCC VS-TLCM3-CCC VS-TLCM3-CRD VS-AMTL VS-CRTI VS-CRTI VS-CRTI VS-CRTI VS-TLCM3-FA VS-BCAM-SMP	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 5000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK 500 NO 3 F061 A CATUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOAD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL. REMOTE FOR REMOTE CONTROL. REMOTE CONTROL. HOOK FROM T LABEL FOR REMOTE CONTROL. 2 FUNCTIONS FOR VEOROX 3 REMOTE CONTROL HOOK REMOTE CONTROL LABOR CONTROL. REMOTE CONTROL LABOR CONTROL. REMOTE CONTROL LABOR CONTROL. 2 FUNCTIONS FOR VEOROX 3
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-G-8-CRD VS-CMB MOTORIZATION VEOE VS-TLCM3 VS-TLCM3-CCC VS-TLCM3-CRD VS-AMTL VS-CRTL VS-CRTL VS-TLCM3-FA VS-BCAM-SMP FS-BTZIN	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (uithout the screed) GOOR AND BOOKON LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK OON 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEDBOX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEDBOX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEDBOX 3 MAGNET FOR REMOTE CONTROL REMOTE CONTROL BOOK FOR STARTING FROM SERIAL NUMBER FLP-373 ERROMTE CONTROL BOOK FOR FOR FOR STARTING FROM SERIAL NUMBER FLP-373 ERROMTE CONTROL BOOK FOR FOR FOR FOR VEDBOX 3 MAGNET FOR REMOTE CONTROL 2 FUNCTIONS FOR VEDBOX 3 REMOTE CONTROL HOOK FROMT LABLE FOR REMOTE CONTROL 2 FUNCTIONS FOR VEDBOX 3 REMOVED FROM FLOW FLOW FLOW FLOW FLOW FLOW FLOW FLOW
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CMB MOTORIZATION VEOE VS-TLCM3 VS-TLCM3-CCC VS-TLCM3-CRD VS-AMTL VS-LCM3-FA VS-ECM3-FA VS-BCAM5-MMP F3-8-R2IN BAT-LI BAT-LI SS-VS-VS-WS-WS-WS-WS-WS-WS-WS-WS-WS-WS-WS-WS-WS	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 5000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK WORN 3 FOR 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CONTROL BOADR FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOBOX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOBOX 3 MAGNET FOR REMOTE CONTROL LORD WITHOUT START
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CMB MOTORIZATION VEOE VS-TLCM3-CCC VS-TLCM3-CCC VS-TLCM3-CRD VS-GRT VS-	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (ulthout the screed) GOODN AND BOON LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK MOS 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CONTROL BOADS FOR 2 FUNCTIONS SEMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL REMOTE CONTROL REMOTE CONTROL REMOTE CONTROL FROM LABEL FOR REMOTE CONTROL REMOTE CONTROL HOOK FROM LABEL FOR REMOTE CONTROL SEMOVABLE BATTER PACK (WITH 2 Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHIUM BATTERY SA/ ZAV LITHIUM BATTERY PACK WITH DISPLAY
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-S-CRD VS-CMB MOTORIZATION VEOF VS-TLCM3 VS-TLCM3-CCC VS-TLCM3-CCC VS-AMTL VS-TLCM3-FA VS-EAS-MS-MP FS-BATIN BAT-LI VS-BCAM-CAR	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOOR AND BOOK LIFTING ACTUATORS CORE (all models) WALL CHARGER FOR BATTERY PACK DOS 1 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEORDOX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEORDOX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEORDOX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEORDOX 3 MAGNET FOR REMOTE CONTROL FOR VEORDOX 3 REMOTE CONTROL HOOK FRONT LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEORDOX 3 REMOVABLE BATTERY PACK (with 2 internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12VI INTERNAL LITHIUM BATTERY SA / 2 VI LITHIUM BATTERY FACK WITH DISPLAY BATTERY PACK COMPLETE CASING
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-S-S-CRD VS-CMB MOTORIZATION VEOL VS-CMB VS-TLCM3 VS-TLCM3-CAC VS-TLCM3-CAC VS-TLCM3-CAC VS-TLCM3-CAC VS-CMT VS-CRT VS-CRT VS-CRT VS-CRT VS-CRT VS-CRT VS-CRAM-L VS-BCAM-CAR VS-BCAM-CAR VS-BCAM-CAR VS-BCAM-CAR	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 800 37 9RD 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOADS FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL REMOTE CONTROL LORD FOR SEMENTE CONTROL FOR VEOROX 3 REMOTE CONTROL BOADS FOR SEMENTE CONTROL FOR VEOROX 3 REMOTE CONTROL BOADS FOR SEMENTE CONTROL FOR VEOROX 3 REMOTE CONTROL HODGE REMOTE CONTROL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3 REMOTE CONTROL HODGE REMOTE CONTROL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3 REMOVABLE BATTER PACK (WITH Z Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHUM BATTERY SA/2 AV LITHUM BATTERY PACK CWITH DISPLAY BATTERY PACK COMPLETE CASING 2 ELECTRONIC GOADS SET (display and balancing) FOR BATTERY PACK VS-BCAM
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-S-S-CRD VS-CMB MOTORIZATION VEOS VS-TLCM3 VS-TLCM3-CCC VS-TLCM3-CRD VS-AMTL VS-TLCM3-FA VS-BCAM-SMP F3-8TZIN BAT-II VS-BCAM-CAR	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOOR AND BOOKON LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK OON 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOBOX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOBOX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOBOX 3 MAGNET FOR REMOTE CONTROL 8 REMOTE CONTROL BOOK FOR
VS-VIRN-DM-CAR VS-VIRN-DMC VS-VIRN-SMC VS-VIRN-SS-CRD VS-CMB MOTORIZATION VEOL VS-TLCM3 VS-TLCM3 VS-TLCM3-CRD VS-AMTI VS-MCM3-CRD VS-AMTI VS-MCM3-FA VS-MCM3-FA VS-MCM4-CRD VS	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK 00X 3 FGR 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL REMOTE FOR REMOTE CONTROL REMOTE CONTROL LADOX REMOTE CONTROL LADOX REMOTE CONTROL LADOX REMOTE CONTROL LADOX REMOTE CONTROL STANDAM STAN
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-GS-CRD VS-CMB MOTORIZATION VEOLE VS-TLCM3 - CCC VS-TLCM3 - CC	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOODN AND BOON LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK MOST 3 FOR 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CONTROL BOADS FOR 2 FUNCTIONS SEMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 BROWNER BERNOTE CONTROL FOR YEDBOX 3 FROM LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR YEDBOX 3 BROWNABLE BATTERY PACK (WITH 2 Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHIUM BATTERY FACK WITH DISPLAY BATTERY PACK COMPLETE CASING 2 ELECTRONIC BOARDS SET (display and balancing) FOR BATTERY PACK VS-BCAM 5MP INTERNAL BLAY FUSE SA/2D -2000MA (set of 5)
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-6-8-CRD VS-CMB MOTORIZATION VEOR VS-TLCM3 - VS-TLCM3-CCC VS-TLCM3-CCC VS-MTL VS-TLCM3-FA VS-ECAN-SMP 7-8-BT2IN BAT-LI VS-BCAM-CAR VS-BCAM-CA	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 5000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 00X 3 70R1 A EACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOAD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL FOR VEOROX 3 REMOTE CONTROL BOOK FRONT LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3 REMOVABLE BATTERY PACK (WITE 2 INTERNAL BATTERIES SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHIUM BATTERY SA/2V LITHIUM BATTERY PACK WITH DISPLAY BATTERY PACK COMPLETE CASING 2 ELECTRONIC BOARDS SET (display and balancing) FOR BATTERY PACK VS-BCAM CONNECTION RIT WITH FUSES FOR BATTERY PACK VS-BCAM OUVS-BCAM-SMP INTERNAL DELAY FUSES SA/2D -2000M, (set of 5) INTERNAL DELAY FUSES SA/2D -2000M, (set of 5) INTERNAL DELAY FUSES SA/2D -2000M, (set of 5)
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-DM-C VS-VRN-SS-CRD VS-CMB WGTORIZATION VEOE VS-TLCM3 - CVS-TLCM3 - CVS - TLCM3 - CVS	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 0003 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOADS FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL REMOTE CONTROL BOADS FOR SEMENTE CONTROL FOR VEOROX 3 REMOTE CONTROL BOADS FOR SEMENTE CONTROL FOR VEOROX 3 REMOTE CONTROL HOOK FROMT LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3 SER MOVABLE BATTERY PACK (WITH 2 Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHIUM BATTERY SA/ ZAV LITHIUM BATTERY PACK WITH DISPLAY BATTERY PACK COMPLETE CASING 2 ELECTRONIC GRANGS SET (display and balancing) FOR BATTERY PACK VS-BCAM CONNECTION SET WITH FUSES FOR BATTERY PACK VS-BCAM OUNS-BCAM-SMP INTERNAL LICHER SEX SAV2 DAY (set of 5) BATTERY PACK MUST SEX SAV2 OWN (SET OF 5) BATTERY PACK MORES VE FRONTAGE DISPLAY FOR VS-BCAM SATTERY PACK MORES VE FRONTAGE DISPLAY FOR VS-BCAM SATTERY PACK MORE SEX SAV2 OWN (SET OF 5) BATTERY PACK MORESVE FRONTAGE DISPLAY FOR VS-BCAM SATTERY PACK MORESVE FRONTAGE DISPLAY FOR VS-BCAM BATTERY PACK MORE SAVE FRONTAGE DISPLAY FOR VS-BCAM
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-GS-CRD VS-CMB MOTORIZATION VEOR VS-TLCM3 VS-TLCM3-CCC VS-TLCM3-CRD VS-AMTL VS-TLCM3-FA VS-BCAM-SMP PS-BTZIN BAT-II VS-BCAM-CAR VS-BCAM-CRT VS-BCAM-CRT VS-BCAM-CRT VS-BCAM-CRT VS-BCAM-FAE VS-BCCAM-CRT VS-BCAM-FAE VS-BCAM-FAE VS-BCCAM-CRT VS-BCAM-CRT VS-BCAM-CRT VS-BCAM-CRT VS-BCAM-CRT VS-BCAM-FAE VS-BCAM-CRT VS-B	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOOR AND BOOKON LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK ODN 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL BOARD FOR VEOROX 3 REMOTE CONTROL BOARD FOR 2 FUNCTIONS FOR VEOROX 3 REMOTE CONTROL BOARD FOR 2 FUNCTIONS FOR VEOROX 3 REMOTE CONTROL HOOK FROMT LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3 REMOTE CONTROL HOOK FROMT LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3 REMOTE CONTROL HOOK FROMT LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3 REMOVABLE BATTERY PACK (with 2 internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V UITHUM BATTERY PACK WITH DISPLAY BATTERY PACK COMPLETE CASING 2 ELECTRONIC BOARDS SET (display and balancing) FOR BATTERY PACK VS-BCAM CONNECTION AT WITH FUSES FOR BATTERY PACK VS-BCAM OU VS-BCAM-SMP INTERNAL BLEAV FUSE SA/20-2 AS VIGET 6'S BATTERY PACK HOMESTE FRONTAGE DISPLAY FOR VS-BCAM
VS-VIRN-DM-CAR VS-VIRN-DM-CAR VS-VIRN-GM-CAR VS-VIRN-GS-CRD VS-CMB MOTORIZATION VEOL VS-TLCM3 VS-TLCM3-CRD VS-AMTL VS-AMTL VS-AMTL VS-BCAM-SAMP F3-BT2IN BBT-LI VS-BCAM-CAR VS-BCCAC-CC VS	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOODNETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOODN AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK OND 3 76PL 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOAD RO AS FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL REMOTE CONTROL HORD REMOTE CONTROL HORD REMOTE CONTROL LABOR FOR PACKED STARTING FOR VEOROX 3 REMOTE CONTROL HORD REMOTE CONTROL HORD REMOTE CONTROL STARTING FOR VEOROX 3 REMOTE CONTROL HORD REMOTE CONTROL STARTING FOR VEOROX 3 REMOTE CONTROL STARTING FOR VEOROX 3 REMOTE CONTROL HORD REMOTE CONTROL STARTING FOR VEOROX 3 REMOTE CONTROL STARTING FOR FOR VEOROX 4 LITHIUM BATTERY PACK WITH DISPLAY BATTERY PACK OMPLETE CASING 2 ELECTRONIC BOARDS SET (display and balancing) FOR BATTERY PACK VS-BCAM CONNECTION SET WITH FUSIES FOR BATTERY PACK VS-BCAM OU VS-BCAM-SMP INTERNAL DELAY FUSIES XE XED ZOOMO (seef of 5) BATTERY PACK HORD SET VEOROX 3 2 FUNCTIONS SOUTH SOUTH ON SEASOR VEOROX 3 2 FUNCTIONS CONTROL BOX VEOROX 3 2 FUNCTIONS (without battery pack) CONTROL BOX VEOROX 3 2 FUNCTIONS (without battery pack) CONTROL BOX VEOROX 3 2 FUNCTIONS (without battery pack)
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-G-8-CRD VS-CMB MOTORIZATION VEOL VS-TLCM3 VS-TLCM3-CCC VS-TLCM3-CCC VS-TLCM3-CCC VS-TLCM3-CCC VS-SAMTL VS-TLCM3-CRD VS-AMTL VS-TLCM3-CRD VS-AMTL VS-TLCM3-CRD VS-AMTL VS-TLCM3-CRD VS-AMTL VS-TLCM3-CRD VS-AMTL VS-TLCM3-CRD VS-AMTL VS-TLCM3-CRD VS-BCAM-CAR VS-BCCA-CCC VS-BCCC3 VS-BCCCA VS-BCCC3 VS-BCCCC VS-BCCC3 VS-BCC3 VS-BCCC3 VS-BCCC3 VS-BCCC3 VS-BCCC3 VS-BCCC3 VS-BCCC3 VS-BCCCA VS-BCCC3 VS-	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOODN AND BOOK LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK MOST 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 MAGNET FOR REMOTE CONTROL REMOTE CONTROL FOR YEDBOX 3 REMOTE CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 EREMOTE CONTROL HOOK REMOTE CONTROL HOOK REMOTE CONTROL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOBOX 3 BEROVABLE BATTERY PACK (WITH 2 Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHIUM BATTERY FACK WITH DISPLAY BATTERY PACK COMPLETE CASING 2 ELECTRONIC BOARD SET (display and balancing) FOR BATTERY PACK VS-BCAM CONNECTION KIT WITH FUSES FOR BATTERY PACK VS-BCAM OU VS-BCAM-SMIP INTERNAL BLEVY FUSE SA/20-2 JOUGNA (set of 5) BATTERY PACK KOMPLETE CASING 2 BATTERY PACK ADMESTER FORNTAGE DISPLAY FOR VS-BCAM CONTROL BOAN FOR VS-BOXX 3 FUNCTIONS (without battery pack) CONTROL BOAN FOR VS-BOXX 3 FUNCTIONS (without battery pack) CONTROL BOAN FOR VS-BOXX 3 FUNCTIONS
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-DMC VS-VRN-GM-CRD VS-CMB MOTORIZATION VEOL VS-TLCM3 VS-TLCM3-CRD VS-TLCM3-CRD VS-TLCM3-CRD VS-TLCM3-CRD VS-TLCM3-CRD VS-TLCM3-CRD VS-TLCM3-CRD VS-MTIL VS-CRTI VS-CRTI VS-CRTI VS-CRTI VS-BCAM-SMP F3-BT2IN BBT-LI VS-BCAM-CAR VS-	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (all models) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 5000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK 00X 3 FOR 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOAD ROA 2 FUNCTIONS SEMENTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL. REMOTE CONTROL HOOK FROM T LABEL FOR REMOTE CONTROL. REMOTE CONTROL HOOK FROM T LABEL FOR REMOTE CONTROL. SEMENVABLE BATTER PACK (WITH 2) Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V UNITHAM BATTERY PACK (WITH DISPLAY SHEEVE PACK COMPLETE CASING 2 ELECTRONIC BOARDS SET (display and balancing) FOR BATTERY PACK VS-BCAM CONNECTION BIT WITH FUSIS FOR BATTERY PACK VS-BCAM OUT VS-BCAM-SMP INTERNAL DELAY FUSIS SAV2 DOWN (set of 5) INTERNAL DELAY FU
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-GA-CRD VS-CMB MOTORIZATION VEOL VS-TLCM3 - CVS-TLCM3 - CVS VS-TLCM3 - CRD VS-AMTL VS-TLCM3 - CRD VS-TL	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 0003 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CONTROL BOADS FOR 2 FUNCTIONS SEMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 REMOTE CONTROL BOADS FOR 2 FUNCTIONS FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 REMOTE CONTROL HOOK FROM I LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR YEDBOX 3 REMOVABLE BATTERY PACK WITH DISTALY INTERNAL LITHIUM BATTERIS SA/12V INTERNAL LITHIUM BATTERIS SA/12V INTERNAL LITHIUM BATTERY FACK WITH DISTALY BATTERY PACK COMPLETE CASING 2 ELECTRONIC GOADS SET (display and balancing) FOR BATTERY PACK VS-BCAM CONNECTION SET WITH FUSES FOR BATTERY PACK VS-BCAM OUTS-BCAM-SMP INTERNAL DELAY FUSE SA/20-2000MA (see of 5) SAFTERY PACK NOR FASTERNING CONTROL BOOK FOR SEA SE FOR CONTROL BOOK DAS SECC-CCC-ECP CONNECTE MERGENEROMY STOP BUTTON SECC-CCC-ECP CONNECTE MERGENEROMY STOP BUTTON SECC-CCC-ECP COMPLETE MERGENEROMY STOP BUTTON SECC-CCC-ECP
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-DMC VS-VRN-S-CRD VS-CMB MOTORIZATION VEOL VS-TLCM3 VS-TLCM3 VS-TLCM3 VS-TLCM3 VS-TLCM3-CRD	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (without the screed) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 5000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK 00X 3 760T LA CTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOADR FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOROX 3 MAGNET FOR REMOTE CONTROL FOR WEOROX 3 REMOTE CONTROL HOOK FRONT LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3 REMOVABLE BATTERY PACK (WITH 2) Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHIUM BATTERY SA/2 AV LITHIUM BATTERY PACK (WITH DISPLAY BATTERY PACK COMPLETE CASING 2 ELECTRONIC BOARDS SET (display and balancing) FOR BATTERY PACK VS-BCAM CONNECTION KIT WITH FUSES FOR BATTERY PACK VS-BCAM OU VS-BCAM-SMP INTERNAL DELAY FUSE S X2D-200MA (set of 5) INTERNAL DELAY FUSE S X ZD-200MA (set of 5) INTERNAL DELAY FUSE S X ZD-200MA (set of 5) INTERNAL DELAY FUSE S X ZD-200MA (set of 5) INTERNAL DELAY FUSE S X ZD-200MA (set of 5) INTERNAL DELAY FUSE S X ZD-200MA (set of 5) INTERNAL DELAY FUSE S X ZD-200MA (set of 5) INTERNAL DELAY FUSE S X ZD-200MA (set of 5) CONTROL BOARD FOR VEORON X 2 FUNCTIONS
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-B-S-CRD VS-CMB MOTORIZATION VEO VS-TLCM3 VS-CCMB VS-TLCM3-CCC	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTINS ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 000X 3 FOR 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CONTROL BOADD FOR 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 MAGNET FOR REMOTE CONTROL REMOTE CONTROL BOADD FOR YEODOX 3 MAGNET FOR REMOTE CONTROL REMOTE CONTROL HODG REMOTE CONTROL HODG REMOTE CONTROL BOADD FOR YEODOX 3 SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHIUM BATTERY FACK (WITH 2 Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V ILTHIUM BATTERY PACK COMPLETE CASING 2 ELECTRONIC GOANDS SET (display and balancing) FOR BATTERY PACK V-S-BCAM CONNECTION SET WITH FUSIS FOR BATTERY PACK V-S-BCAM OU VS-BCAM-SMP INTERNAL LITHIUS SEX202 DOMB (seed of 5) INTERNAL DELAY FUSIS SEX 201A 250 V (seed of 5) BATTERY PACK ADDRESSEY FRONTAGE DISPLAY FOR VS-BCAM CONTROL BOAD WITH DISPLAY FOR VEGBOX 3 FUNCTIONS CONTROL BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD BOAD WITH DISPLAY FOR VEGBOX 3 2 FUNCTIONS CONTROL BOAD BOAD WITH DISPL
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-G-S-CRD VS-CMB WS-CMB WS-CMB VS-TLCM3-CCC VS-TLCM3-CCC VS-TLCM3-CCC VS-TLCM3-CRD VS-AMTL VS-TLCM3-CRD VS-AMTL VS-TLCM3-FA VS-BCAM-SMP F3-BT2IN BAT-II VS-BCAM-CAR V	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOODN AND BOOK LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK OND 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CONTROL BOARD FOR 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 MAGNET FOR REMOTE CONTROL REMOTE CONTROL FOR YEOBOX 3 REMOTE CONTROL BOOK FOR FOR REMOTE CONTROL FOR YEOBOX 3 REMOTE CONTROL HOOK FROM I LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOBOX 3 SERVICE AND FOR THE FOR FEMALE FOR THE START FOR FEMALE FOR THE START FOR FEMALE FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOBOX 3 SET OF 2 INTERNAL BATTERIES SA/2 2V INTERNAL LITHIUM BATTERY FACK WITH DISPLAY BATTERY PACK VEOR SA/2 AV LITHIUM BATTERY FACK WITH DISPLAY BATTERY PACK VEOR SA/2 AV LITHIUM BATTERY FACK WITH DISPLAY BATTERY PACK VEOR SA/A SA/A SA/A SA/A SA/A SA/A SA/A SA/
VS-VEN-DM-CAR VS-VEN-DM-CAR VS-VEN-GAS-CRD VS-CMB MOTORIZATION VEOL VS-TLCM3 VS-TLCM3-CRD VS-TLCM3-CRD VS-AMTI VS-TLCM3-CRD	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (without the screed) GOODNETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOODN AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK ON 3 FORT 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CONTROL BOADD FOR 2 FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR VEOROX 3 REMOTE CONTROL HODOX REMOTE CONTROL HODOX REMOTE CONTROL LADAR CONTROL 2 FUNCTIONS FOR VEOROX 3 REMOTE CONTROL HODOX REMOTE CONTROL POR REMOTE CONTROL 2 FUNCTIONS FOR VEOROX 3 REMOVABLE BATTER PACK (WITH 2 Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHUM BATTERY FACK (WITH DISPLAY BATTERY PACK COMPLETE CASING 2 ELECTRONIC BOARDS SET (display and balancing) FOR BATTERY PACK VS-BCAM CONNECTION SET WITH FUSIES FOR BATTERY PACK VS-BCAM OU VS-BCAM-SMP INTERNAL DELAY FUSE SAX2 200M (seef of 5) BATTERY PACK HOME SEX SAX2 200M (seef of 5) BATTERY PACK HOME SEX SEX 200M (seef of 5) INTERNAL DELAY FUSE SAX2 200M (seef of 5) BATTERY PACK HOME SEX FOR POINTAGE DISPLAY FOR VS-BCAM BATTERY PACK HOME SAY FROM ASSET (single) SULVETONS CONTROL BOAD WITH DISPLAY FOR VS-BCAM BATTERY PACK HOME SAY FOR VS-BCAM SECCECC AND VS-BCC-CC-ECP COMPLETE EMERGENCY STOP BUTTON CONTROL BOAD WITH DISPLAY FOR VS-BORD AS FUNCTIONS CONTROL BOAD WITH DISPLAY FOR VS-BORD AS FUNCTIONS
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-B-ACRD VS-CMB MOTORIZATION VEOE VS-TLCM3-CCC VS-	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOODN AND BOOK ON LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK OND 3 FOR 1 ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CONTROL BOADS FOR 2 FUNCTIONS SEMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEDBOX 3 REMOTE CONTROL BOADS FOR SEMOTE CONTROL FOR YEDBOX 3 REMOTE CONTROL HOOK FROM I LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEBBOX 3 REMOTE CONTROL HOOK FROM I LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR YEDBOX 3 REMOVABLE BATTERY PACK (WITH DISTANCE AND YEDBOX 3 REMOVABLE BATTERY PACK (WITH DISTANCE AND YEDBOX 3 REMOVABLE BATTERY PACK (WITH DISTANCE AND YEDBOX 3 REMOVABLE BATTERY PACK WITH DISTANCE AND YEDBOX 3 REMOVABLE BATTERY PACK WITH DISTANCE AND YEDBOX 3 REMOVED AND YEDBOX SERVICE OF THE YED YED YED YED YED YED YED YED YED YE
VS-VRIN-DM-CAR VS-VRIN-DM-C VS-VRIN-DM-C VS-VRIN-G-S-CRD VS-CMB MOTORIZATION VEOL VS-TLCM3 VS-TLCM3-CVS VS-TLCM3-CVS VS-TLCM3-CVS VS-TLCM3-CVS VS-ADMTL VS-TLCM3-CRD VS-ADMTL VS-TLCM3-CRD VS-ADMTL VS-TLCM3-CRD VS-ADMTL VS-BCAM-CAR VS-B	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (without the screed) GOODN AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK ON 3 760H 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOROX 3 MAGNET FOR REMOTE CONTROL. REMOTE CONTROL LADOX REMOTE CONTROL LADOX REMOTE CONTROL LADOX REMOTE CONTROL LADOX REMOTE CONTROL HOOK REMOTE CONTROL LADOX REMOTE CON
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-DM-C VS-VRN-68-CRD VS-CMB MOTORIZATION VEOL VS-TLCM3 - VS-CMB VS-TLCM3-CCC VS-TLCM3-CCC VS-TLCM3-CRD VS-AMTL VS-TLCM3-CRD VS-BCAM-CAR VS-CAR VS-CAR VS-CAR VS-CAR VS-CAR VS-CAR VS-VRN-CAR	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 000X 3 FOR 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CONTROL BOADR FOR 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 REMOTE CONTROL BOADR FOR 2 FUNCTIONS FOR YEOBOX 3 REMOTE CONTROL BOADR FOR YEODR CONTROL REMOTE CONTROL FOR YEOBOX 3 REMOTE CONTROL HOOK FROMT LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOBOX 3 SER MOVE AGAINST PACK (WITH DISPARY PACK WITH DISPARY
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-DMC VS-CMB MOTORIZATION VEOL VS-TLCM3 VS-TL	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (without the screed) GOODN AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK ON 3 760H 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOROX 3 MAGNET FOR REMOTE CONTROL. REMOTE CONTROL LADOX REMOTE CONTROL LADOX REMOTE CONTROL LADOX REMOTE CONTROL LADOX REMOTE CONTROL HOOK REMOTE CONTROL LADOX REMOTE CON
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-DMC VS-VM-S-G-RD VS-CMB VS-CMB VS-CMB VS-CMB VS-CMB VS-TLCM3-CRD VS-TLCM3-CRD VS-MMT VS-MMT VS-MMT VS-MMT VS-MMT VS-MMM VS-MMT VS-MMM V	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 6000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 000X 3 FOR 1 ACTUATORS (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CONTROL BOADR FOR 2 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOBOX 3 REMOTE CONTROL BOADR FOR 2 FUNCTIONS FOR YEOBOX 3 REMOTE CONTROL BOADR FOR YEODR CONTROL REMOTE CONTROL FOR YEOBOX 3 REMOTE CONTROL HOOK FROMT LABEL FOR REMOTE CONTROL 2 FUNCTIONS FOR VEOBOX 3 SER MOVE AGAINST PACK (WITH DISPARY PACK WITH DISPARY
VS-VRN-DM-CAR VS-VRN-DMC VS-VRN-DMC VS-CMB MOTORIZATION VEOL VS-TLCM3 VS-TL	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM CASING FOR ACTUATOR (without the screed) COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) 5000N AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR BATTERY PACK 500X 3 70R1 A ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CONTROL BOADR FOR 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CORD FOR A FUNCTIONS REMOTE CONTROL FOR YEOROX 3 MAGNET FOR REMOTE CONTROL FOR YEOROX 3 REMOVABLE BATTERY PACK WITH STANDARD S
VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-DM-CAR VS-VRN-SS-CRD VS-CMB WS-CMB VS-CMB VS-CMB VS-CMB VS-CMB VS-CMB VS-CMB VS-MM-CAR VS-VM-CAR VS-VM-CAR VS-MM-CAR VS-VM-CAR VS-V	COMPLETE CONTINUED EMERGENCY LOWERING SYSTEM FOR ACTUATOR (without the screed) GOODN AND 8000N LIFTING ACTUATORS CORD (all models) WALL CHARGER FOR RATTERY PACK SON 3 76PL 1ACTUATOR (mechanical opening legs) STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CONTROL BOADR FOR 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CONTROL BOADR FOR 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CONTROL BOADR FOR 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 CORD FOR 4 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 REMOTE CONTROL HORD REMOTE CONTROL HORD REMOTE CONTROL LADDRE CONTROL ROWERD STARTING FROM SERIAL NUMBER FLP-373 2 FUNCTIONS REMOTE CONTROL FOR YEOROX 3 REMOTE CONTROL HORD REMOTE CONTROL HORD REMOTE CONTROL FOR REMOTE CONTROL 2 FUNCTIONS FOR YEOROX 3 REMOVABLE BATTERY PACK (WITH 2 Internal batteries SA/12V) WITHOUT LOAD DISPLAY AND BALANCING SET OF 2 INTERNAL BATTERIES SA/12V INTERNAL LITHIN BATTERY SA/2 AV LITHIUM BATTERY PACK WITH DISPLAY BATTERY PACK COMPLETE CASING 2 ELECTRONIC BOANDS SET (display and balancing) FOR BATTERY PACK V-S-BCAM CONNECTION SET WITH FUSES FOR BATTERY PACK V-S-BCAM OU V-S-BCAM-SMP INTERNAL DELAY FLUS SA/20 2000 (seet of 5) NEENALD BLAY FLUS SA/20 2000 (seet of 5) NEENALD BLAY FLUS SA/20 2000 (seet of 5) SATTERY PACK HORD K-S-BCAM FLUES SA/20 YE SHAY FOR V-S-BCAM BATTERY PACK HORD K-S-BCAM FLUES SA/20 YE SHAY FOR V-S-BCAM BATTERY PACK HORD K-S-BCAM FLUES SA/20 YE SHAY FOR V-S-BCAM BATTERY PACK HORD K-S-BCAM FLUES SA/20 YE SHAY FOR V-S-BCAM BATTERY PACK HORD K-S-BCAM FLUES SA/20 YE SHAY FOR V-S-BCAM BATTERY PACK HORD K-S-BCAM FLUES SA/20 YE SHAY FOR V-S-BCAM BATTERY PACK HORD K-S-BCAM FLUES SA/20 YE SHAY FOR V-S-BCAM SAMP INTERNAL BLAY FILES SA/20 ZOONO K-S-BCAM SAMP INTERNAL B

Cleaning & Maintenance

BEFORE ANY HANDLING:

- Disconnect the AC power cord.
- Check that all electrical components are connected to each other.
- Clean electrical enclosures of the actuators and of the handsets, if they have been soiled by body fluids, especially urine.

OBJECTIVE:

- Repair the patient lift and prevent the transmission of germs from one patient to another.
- Remove any organic soil by mechanical action (cleansing) or chemical action (disinfection).

CLEANING PROCESS:

- Clean the surfaces with a wet cloth by using an apropriate detergent.
- A regular cleaning is recommanded.

WARNING:

- The detergents used must have a neutral pH.
- Avoid the abrasive products and solvent, they could damage the device surface state.

DAILY MAINTENANCE:

- By means of a product applied on the surface in one operation.
- After the patient's discharge by respecting the following operation:
- Cleaning is carried out by means of a cloth impregnated with a disinfectant solution surface.
- Maintenance by specific service providers after removal of the stand-up lift from the facility:
- Biological cleaning operation
 Steam cleaning of various flat surfaces. Change surfaces regularly when washing to avoid water load. Steam cleaning of inaccessible areas. For tubes, steam use with a microfiber mop. Do not direct steam directly on the electrical boxes.

CAUTION:

• Disinfection of actuators, electrical boxes and handsets with a microfiber cloth impregnated with disinfectant.

MONTHLY MAINTENANCE:

- Check that the device does not present any visible damages.
- Check that no part is missing.
- Check the good functioning of the castors and that no matter prevents their bearing.
- Check the good fonctioning of the commands as well as the connections of the remote control and the actuator on the battery.
- · Clean the sockets and the commands buttons with a dry cloth, if needed with a wet cloth.
- · Check the good state of the electric cables.

Never clean the patient lift, especially the electrical system, with a high pressure cleaner, water hose or similar because doing so could damage the surfaces and seals, and water could enter.

Motorisation Technicals Characteristics

- Removable battery pack
- Digital display of the autonomy
- Emergency stop
- Electrical security lowering system
- Wall charger (in option)
- Remote control 2 functions
- Conform to Standard EN 60601-1
- DC motor low voltage 24V
- 24V / 120VA power
- Maximum strength: 8000 N
- Lifting stroke: 29 cm
- Electronic protection when overloaded
- Protection class: IIProtections types:
- Remote control: IP54
- Control box: IP65
- Battery pack: IP65
- Actuator: IP55
- Stop limit switch
- Box in ABS
- Handcontrol with spiral cable, low voltage 24V
- Protection against overloading through thermo-switch
- Loudness: less than 55dB at a distance of 1 meter.
- Electromagnetic compatibility: conforms to EN 60601-1-2

Battery Charging Diagram:





Motorisation Technicals Characteristics

BEFORE SERIAL NUMBER FLP-373

Cycle counter:

We have a time counter of 600,000 secondes. If we consider that the actuator makes full strokes at an average speed of 9 mm/s that represents approximately 10,000 full cycles.

To check the number of cycles already performed, you must use the remote control 2 buttons:

-Press the 2 buttons at the same time.

The indication of the number-of cycles performed is indicated by the digits, the indication remains displayed for about 3 seconds.

-If no digit is displayed the number of cycles performed is less than 150, 000 sec.

- -If one digit appears the jack has been used for 150, 000 sec or 25% of the maximum time.
- -If 2-digit appear, the actuator was used for 300, 000 sec or 50% of the maximum time.
- -If 3 digits appear, the actuator was used for 450, 000 sec or 75% of the maximum time.
- -If 4 digits appear, the actuator was used for 600, 000 sec or 100% of his time and the maximum box no longer work.

This counter work with time and not cycle because usual cycles counter count when you push on a remote control button. The problem with this type of counter is when you push 5 times on one cycle, It'll count 5 cycles. The time counter is more accurate and after 10 000 full cycles the actuator need to be checked by the manufacturer.

- After 10,000 complete cycles, a key appears on the screen and the actuator must be checked.











Overload protection system:

• If you attempt to lift a person weighing beyond the maximum limit of the device, an anvil with "ka" written will appear asking you to immediately relieve the unit because it is a non-conform use.

Preservation system of the actuator:

- An integrated system for maintaining the actuator is included in the control box. It corresponds to a ratio between the operating time and the rest time of the actuator.
- For 10% of usage time, it takes 90% of sleep time.
- For 6 minutes of continuous use, you must wait 54 minutes before you could reuse the device. If this period is not respected, the device will not work and a jack will be displayed on the screen. When this cycle is exceeded, there is a risk from overheating the equipment and cause a failure.



Soft stop and soft start Actuator Programming:
Push on the Emergency stop button
Push on button 1 and turn off the emergency stop button
The Control box Green led is flashing:
-3 times: Soft stop and soft start available

-3 times, Soft stop and soft start available -2 times, Soft stop and soft start unavailable

Release button 1 on the handset after cessation of the green LED.



Motorisation Technicals Characteristics

STARTING FROM SERIAL NUMBER FLP-373

A. LCM DISPLAY

0. Information display

- To view the information registered in the control box, you must press the up and down buttons of the box for 5 seconds.

1. Operating factor

- Definition: It accounts for the actuator (up / down) any breach of the duty cycle = non-respect of the actuator rest.



- It counts the number of times an attempt to lift a person weighing beyond the maximum weight limit is performed. When it occurs, the actuator will stop and an anvil will appear, it will be impossible to continue.

3. Overloading of the actuator / b

- It counts the number of times an attempt to spread or close the opening legs while they are stuck is performed. When it occurs, the actuator will stop and an anvil will appear, it will be impossible to continue.

4. Incomplete load

- It records all incomplete loads below 24,6V. This corresponds to the number of charges damaging the battery.

5. Time of use

- Definition: It displays the cumulative operating time of the device. Starting from 600,000 seconds of use, a maintenance key is displayed; it is then essential to carry out a complete control of the device.











Troubleshooting Guide

Problem	Origin	Solutions
The product, without patient, does not go down.	Our products need some weight to go down.	Push down on the lifting arm while pushing the lowering button on the remote control.
Mobile parts are too hard, product is difficult to handle.	Mobile parts need to be greased.	Grease the mobile parts.
The actuator does not work but the user can hear a "click" in the control box when the remote control button is pushed.	Batteries are unloaded. The actuator jack is not plugged. The actuator jack is deteriorated. There are damages on the actuator or on the control box.	1. Load the device. 2. Plug the actuator jack. 3. The actuator has to be repaired. 4. The entire electric system has to be checked.
The actuator does not work and the user does not hear a "click" in the control box when the remote control button is pushed.	1. Emergency button is activated. 2. There is no contact between the battery and the control box. 3. Batteries are unloaded. 4. The remote control jack is not plugged. 5. The remote control jack is deteriorated. 6. There are damages on the remote control or on the control box.	1. Turn the button to unlock the device. 2. Take off the battery and put it back. 3. Check the charging cord. 4. Plug the remote control. 5. Change the remote control. 6. The entire electric system has to be checked.
The actuator stops when lifting.	1 . Batteries are unloaded (sound system + "low battery" written on the screen). 2 . The product has been used for too long. 3 . The weight lifted is too heavy.	Check the charging cord then load battery. Let the device rest a moment (as a protection for the actuator lifespan). Reduce the weight lifted.
The actuator does not work at all	The control box is broken down. The remote control is broken down.	The control box has to be changed. The remote control has to be changed.

Warrantv

 Article 1: NAUSICAA Médical S.A.S. warrants this product against any defects in manufacturing and assembly of mechanical and electronic components. This warranty is for devices used only in accordance with NAUSICAA Médical S.A.S. terms of use.

The warranty covers all mechanical and electrical parts, except battery and breakage.

This warranty whose terms of use are defined below is valid for 60 months from the date of first departure from NAUSICAA Médical S.A.S.

· Article 2: The warranty entitles the free labor and the free replacement of defective parts.

· Article 3: The original out-going shipping costs of the device and all associated costs are the responsibility of the distributor. The goods always travel at the risk and the responsibility of the distributor.

Under warranty: return costs after intervention will be borne by NAUSICAA Médical S.A.S.

Out of warranty: return costs are at the expense of the distributor whether or not he accepts the repair estimate. Article 4: The warranty does not apply if the claims are consecutive to:

- accident, misuse or neglect of the unit by the end customer.

- shipping performed without adequate protection

- alteration or transformation not validated by NAUSICAA Médical S.A.S.
- the impact of external elements (natural disaster, fire, shock, humidity, flood, lightning, ...).
- installation and/or use in a non-compliant way with technical standards and safety (in case the unit would work in a country other than the country of origin); and/or if the electrical power is not suited for the operating voltage of the device.
- a lack of routine maintenance.
- Article 5: The distributor may not invoke the benefit of the warranty:
- if the device serial number has been removed, altered or rendered illegible. - if the device under warranty has been modified without the approval of NAUSICAA Médical S.A.S.
- Article 6: During the repair of any defective equipment, no loan will be made.
 Article 7: All warranty claims must be exercised through the distributor.
- Article 8: Sending spare parts under warranty will be made after consultation with the distributor customer service.
- · Article 9: Defective parts changed under or out of warranty will be guaranteed for 6 months from the date of repair or sending of the spare parts.
- Article 10: No distributor can unilaterally change the terms of this warranty.



CONTACT

Phone: +33 (0) 466 717 184
Fax: +33 (0) 466 532 305
Email: export@nausicaa-medical.com
Website: www.nausicaa-medical.eu

